 
Installing The Receiver

Description

The Sidekick FM System for the Hunter® controllers consist of three components a transmitter, receiver, and a direct controller interface cable. The direct controller interface cable and the receiver are the only components that require installation. Once the DCI-1-H cable is installed, it becomes a permanent access point for the receiver. To use the Sidekick receiver on more then one controller simply install another DCI-1-H cable in the other controller.

Direct Controller Interface Cable (DCI-1-H) Installation

- 1. Open the front panel door of the controller housing.
- 2. Disconnect power from the controller to avoid accidentally damaging the controller. 0.979" DIA
- 3. Determine where to install side "B", the interface receptacle (See diagram on next page) of the DCI-1-H cable. Use an existing cut out or the figure to the right for the hole locations.



- 4. Use four 6-32 screws, lock washers, and nuts of the appropriate length and size.
- 5. Secure the interface receptacle to the cutout or hole location.
- 6. Connect side "A" of the DCI-1-H cable to the Main Control module. See diagram on next page.
- 7. Connect the Red wire to the terminal Marked "AC" above the terminal marked "GND".
- 8. Connect the White wire to the terminal marked "AC" below the terminal marked "REM".
- 9. Connect the Blue wire to the terminal marked "REM"
- 10. Close the front panel door of the controller housing.
- 11. Restore power to the controller.




RECOMMENDED PANEL CUTOUT

Connecting the Sidekick FM Receiver

Connect the interface plug to the interface receptacle on the controller. Twist the plug clockwise until the plug stops. Do not over tight the plug. See diagram on page 2

Disconnecting the Sidekick FM Receiver

Twist the circular plug in a counterclockwise motion and remove the plug from the receptacle.

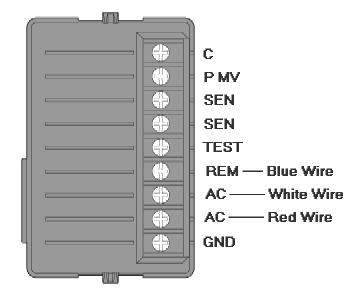

The Blue wire is connected to the terminal marked "REM" The White wire is connected to the terminal marked "AC" The Red wire is connected to the terminal marked "AC"

If you receive an "ERR" message on the LCD display of the controller after wiring the connector as shown, then reverse the positions of the White and Red wires

DCI-1-H Cable and Sidekick Receiver installation

DCI-1-H cable Part Number: 01386